




DYMO LabelManager 160 Keyboard Replacement

This guide provides steps to replace the rubber keypad for your label-maker.

Written By: Matthew Jenkins

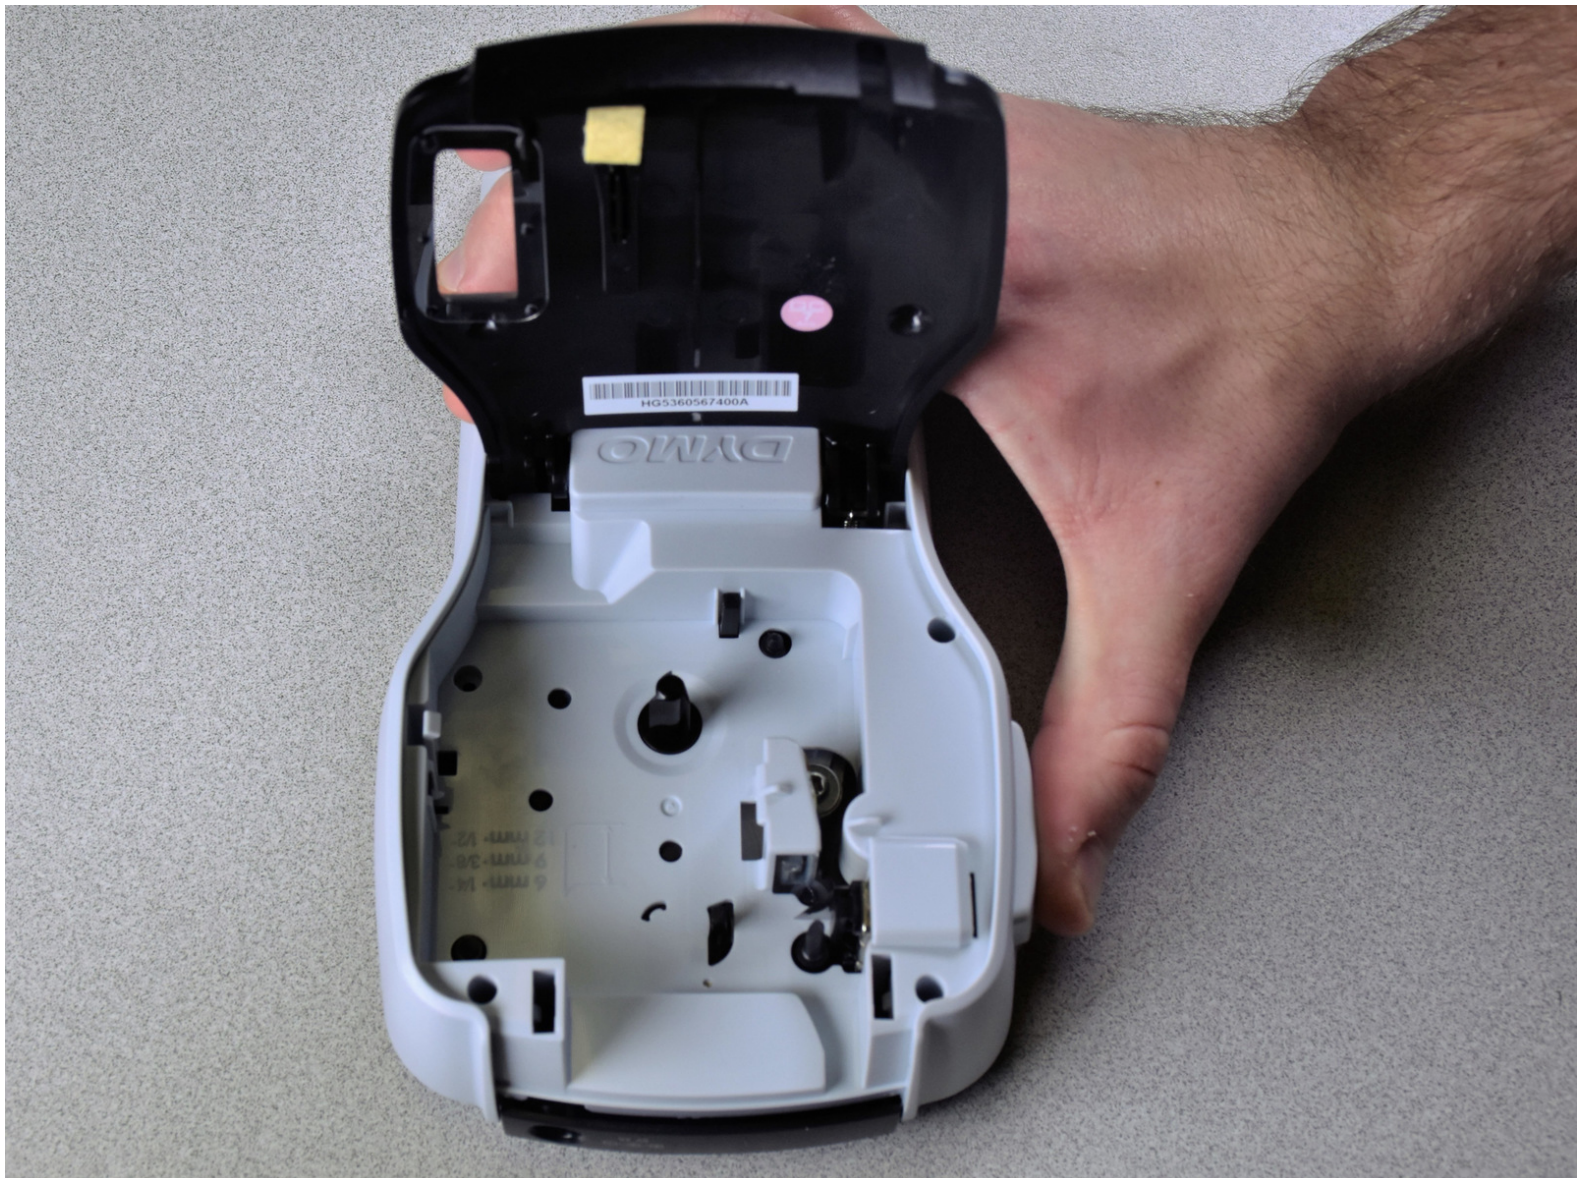

INTRODUCTION

If the label-maker's keys are unresponsive, you may need to replace the keypad. This guide provides the replacement steps.



PARTS:

- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Batteries




- Place the device face-down to access the battery compartment.

Step 2




- Remove the compartment cover to reveal the batteries. Remove the 6 old batteries.

Step 3 — Keyboard

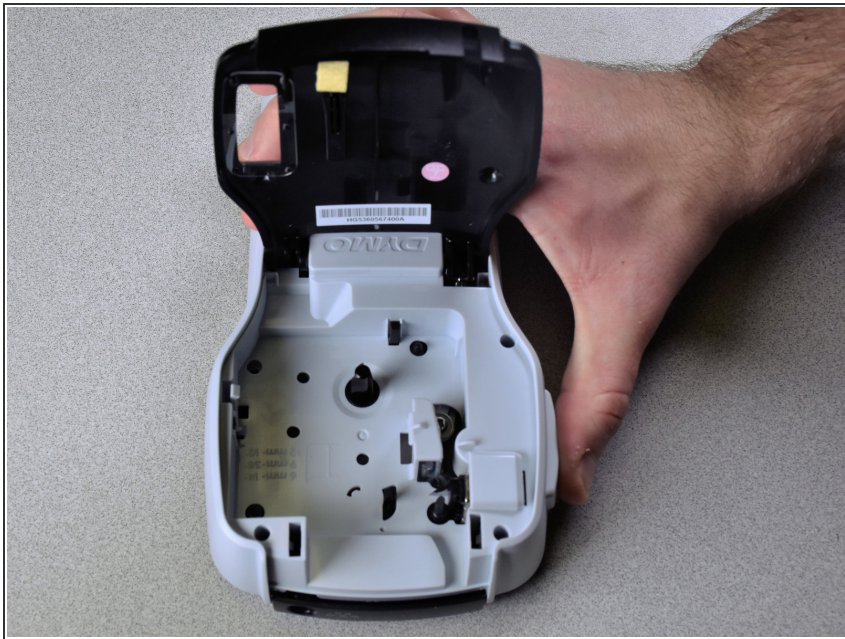


- To open the cartridge compartment, simply lift on the front of the device.

Step 4

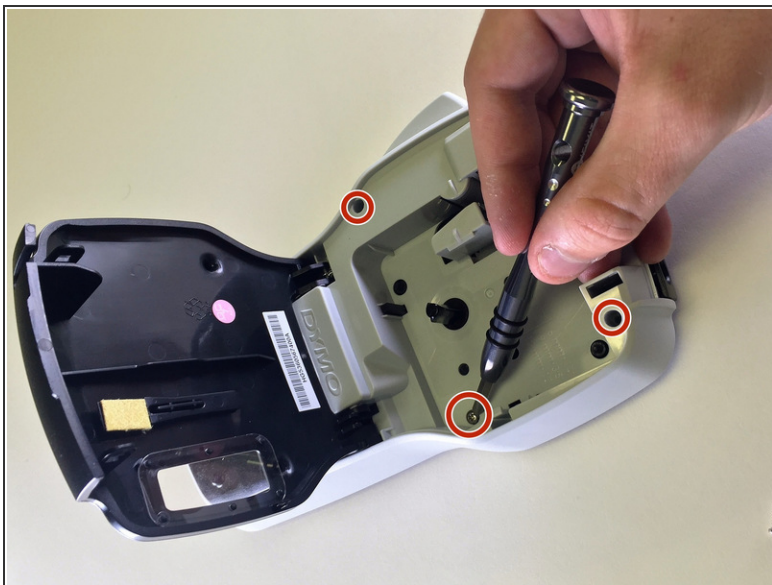




- Using a Phillips head screwdriver, remove the four 1.3mm Phillips #0 screws from the cartridge compartment and two 1.2mm Phillips #0 screws from the battery compartment.

Step 5

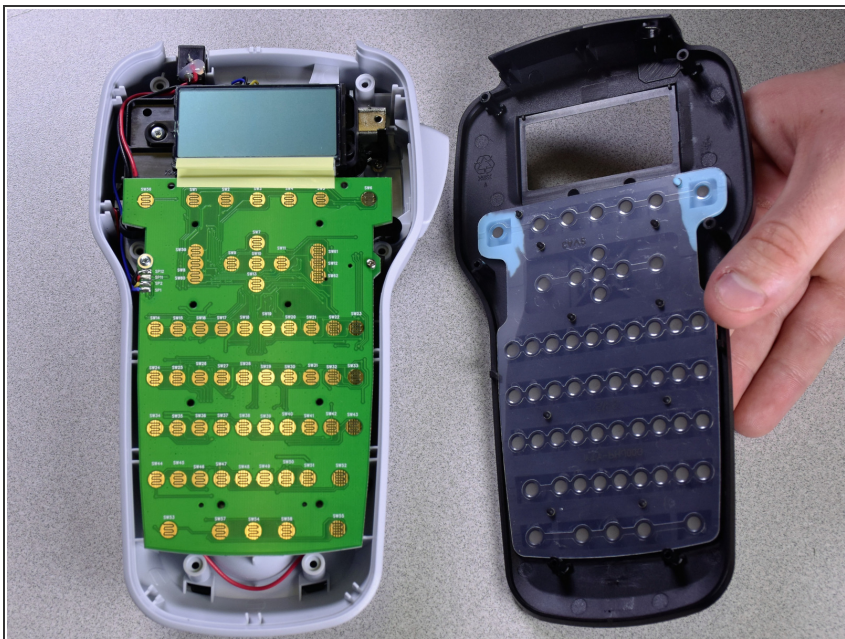

- Using a spudger or other tool, lift and remove the front of the device. This should be done all around the device to ensure the two parts split correctly.

Step 6

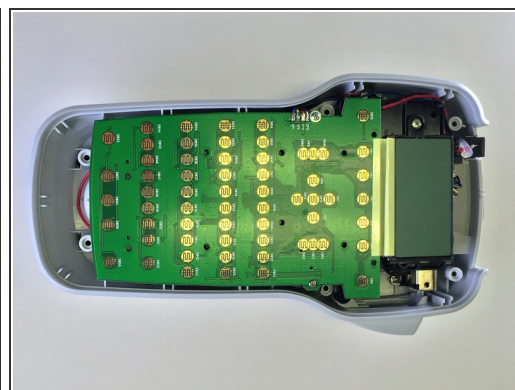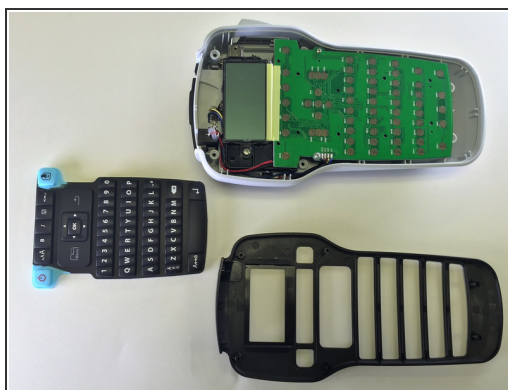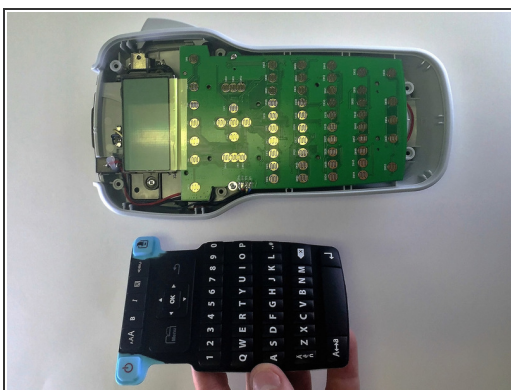

- Gently remove the rubber keyboard from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-08 03:49:22 AM.